

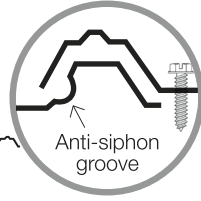

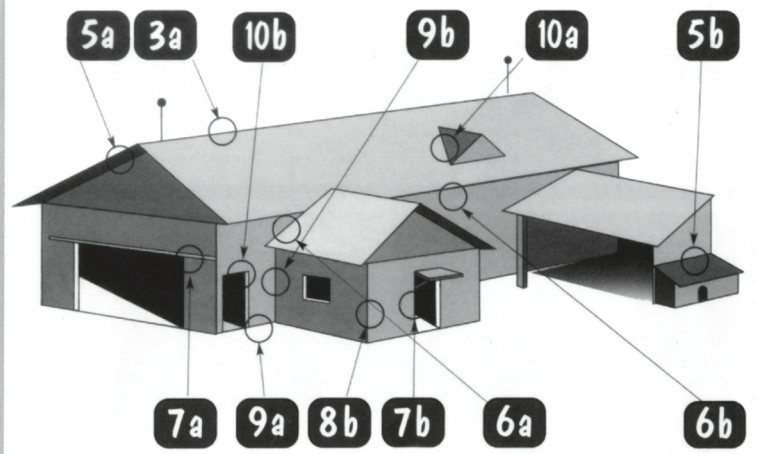


Recommended Fastening Patterns:


Tuff Rib Panel 36" coverage

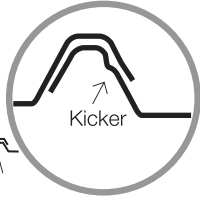

Deep Creek Wave Panel 36" coverage




Ridge Cap 12" & 16"

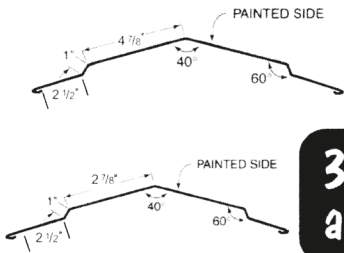


3 a


Overhead Door Trim

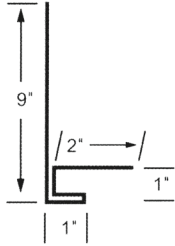


Sliding Door Jamb

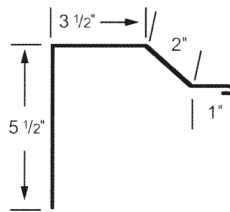

Z - Flashing

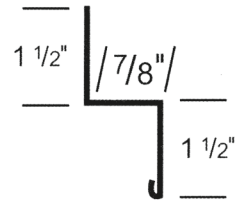


Rake Trim

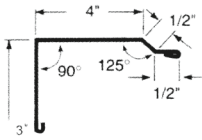


5 a

Endwall & Transition

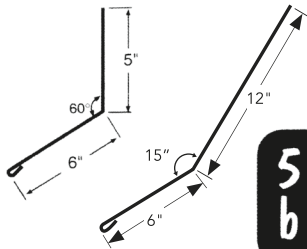


5 b

Sidewall

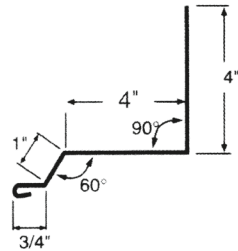


6 a

Eave Trim

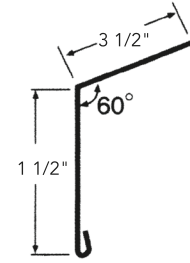


6 b

Door Track Cover

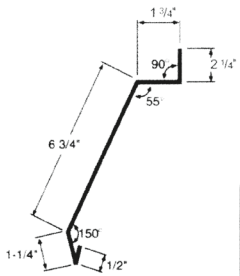


7 a

"J" Channel

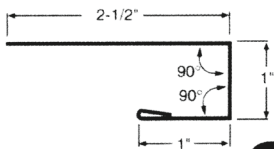


7 b

Large Outside Corner
Small Outside Corner

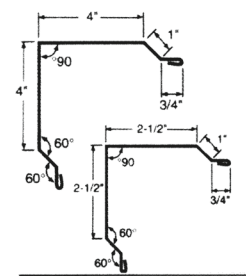


8 b

Residential Corner

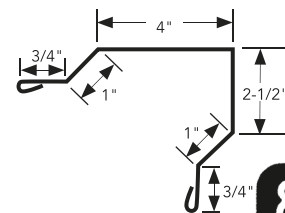


8 c

Rat Guard

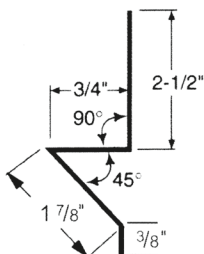


9 a

Inside Corner

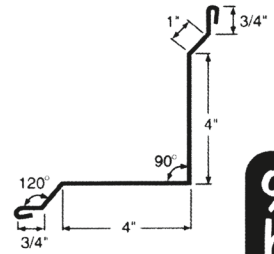


9 b

"W" Valley

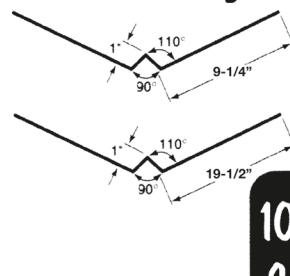

10 a

Base Angle

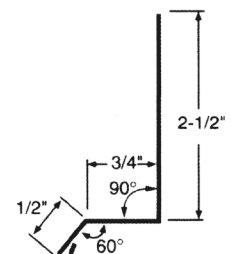

10 b